


MODEL E-4000HA AIR TOOL ADAPTER 5/16-24

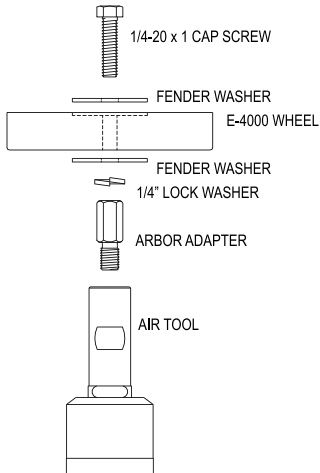

IMPORTANT SAFETY INSTRUCTIONS

Assemble wheel to arbor as shown at right. 1/4" lock washer must be in place between fender washer and arbor adapter. Tighten firmly with a wrench. Replace fasteners immediately if threads become stripped or damaged.

Always wear adequate personal protection when operating stripe eliminator wheel. A full-face shield is required to prevent injury. Long hair, jewelry and loose clothing can become caught in rotating tool causing serious injury.

Stripe eliminator wheel must be in contact with work surface when rotating. Do not allow wheel to free-wheel as separation from tool may result causing serious injury. Allow wheel to come to a complete stop before pulling back from work.

To prevent injury and prolong wheel life, do not operate air tool above 1500 RPM. Replace stripe eliminator wheel immediately if it becomes damaged.

MOTOR GUARD CORPORATION
MAGNA PRODUCTS

MANTECA, CA
1-800-227-2822
www.motorguard.com