REPLACEMENT PARTS

Model No.	Description
E-6080S	Magna-Stripper System
E-6080	Magna-Stripper Replacement Wheel
E-5000H	Magna-Stripper Hardware Kit (Cap Screw, Washers and Arbor)

LIMITED WARRANTY

Motor Guard Corporation assumes the responsibility of providing products that are free from defects in workmanship and material. Should a product fail due to a defect in workmanship or material, Motor Guard Corporation will repair or, at its option, replace the product without charge, other than the transportation charges, provided that the product is returned to the factory, transportation prepaid, within One (1) Year of the date of purchase. Please contact Motor Guard Corporation for return authorization and shipping instructions.

This limited warranty does not cover normal wear and tear or damage to the product due to neglect, misuse or accident, nor does it cover any loss, damage or expense, either direct, indirect or consequential, arising from the non-function of this product.

This limited warranty notice replaces any other warranty information, implied or otherwise, enclosed with this product or appearing in literature referring to this product.


MOTOR GUARD CORPORATION

580 CARNEGIE STREET MANTECA, CALIFORNIA 95337 (800) 227-2822

Rev. 08/16

www.motorguard.com 33120

contact with metal washer. Replace wheel when outer diameter approaches 2", thus preventing accidental With proper operation and minimal pressure, wheel life will be greatly increased.

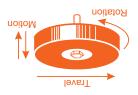

the lighter the pressure required. rule of thumb, the higher the speed, removal requiring a lower speed. As a of finish to be removed, with heavier Optimal speed will vary with thickness wheel speed of 1500 RPM is recommended. For best results and maximum wheel life, a


edges of work to maximize feathering.

pressure and move wheel with slight up and down motion. Reduce pressure at bring wheel in contact with work surface. With wheel rotation shown apply light Before using tool on a critical area, pick an area to test operation. Start tool and

May Result. Do Not Use on Plastic Body Parts as Damage

conjq separate, causing serious injury.

WARNING: Do Not Exceed 4000 RPM or wheel

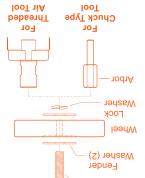

Cap Screw

supply from tool while installing wheel. to exceed 4000 RPM. Disconnect power/air Install assembled wheel in a tool that is set not

spindle with a wrench. screw firmly while holding arbor or air tool may be used to ease installation. Tighten cap rotation to install oversized screw. A nut driver combination of pressure and clockwise Insert cap screw through hole in wheel. Use a

and possible injury. in position shown to prevent wheel separation side of wheel as shown. Lock washer must be fender washers must be in place on either Assemble components as shown at right.

YZSEMBLY

NOITARION

OPERATING INSTRUCTIONS

MAGNA-STRIPPER™

Model E-6080S

Made in USA



The Ultimate Spot Repair Tool for Small Areas

The Magna-Stripper quickly strips Clear Coat, Base Coat, Primer Coat or All Three without damaging the body panel. Soft, resilient compound is impregnated with abrasive; absorbing the heat and leaving the metal like new.



Notice: This Abrasive Wheel will remove paint and other finishes. It is not meant for decal or adhesive removal.

OTOR GUARD CORPORATION AGNA PRODUCTS

SNOITOURTENI ESEHT EVAS

See Safety Data Sheet for more information

to prevent this.

caught in rotating parts of tool. Steps should be taken tool. Long hair, loose clothing and jewelry can become qnet mask should be worn at all times while operating prevent injury/illness from airborne dust particles, a should be worn at all times while operating tool. To To prevent injury from flying debris, a full face shield




operating this tool.



Always wear proper personal protection while



personal injury. Failure to follow instructions may result in serious before servicing.

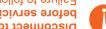

Disconnect tool from all sources of external power

parts that are provided by the manufacturer. intended use. Use only accessories and replacement not modify tool or use it in any manner other than its wheels that have become cracked or damaged. Do cause wheel breakage and serious injury. Discard may fly apart, causing serious injury. Improper use may directives. Do not exceed maximum RPM as wheel well as ANSI B7.1 and applicable O.S.H.A. safety Read & follow all instructions furnished with product as while operating this tool.

damage, observe all warnings and instructions To reduce the risk of serious injury and/or property



